


Bseries Instruction Manual

This manual suitable for KD-5002B and KD-5003B

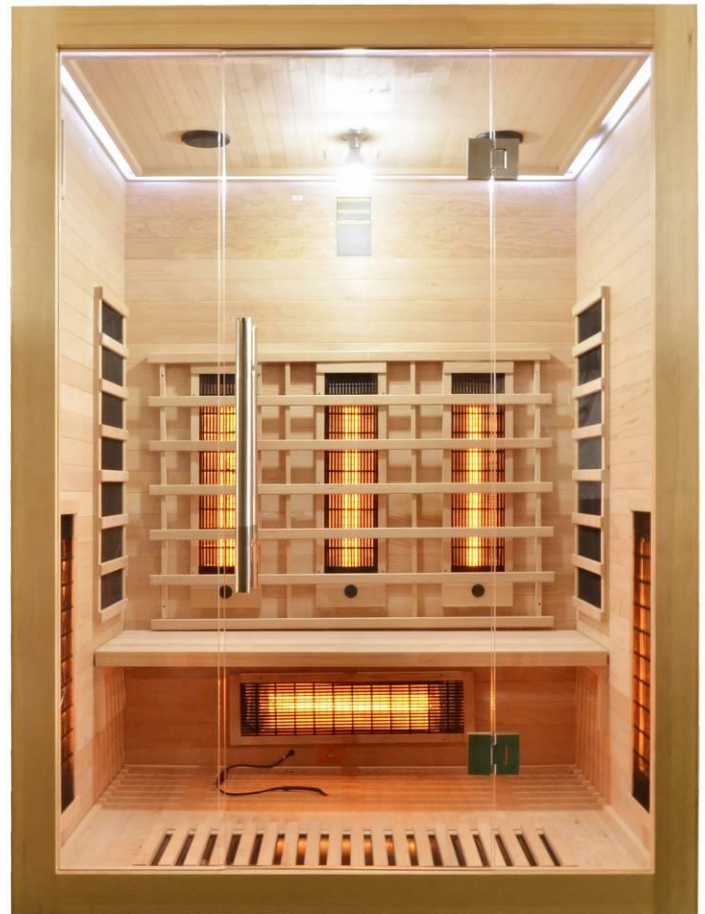

Installation


1. Installation requirements

- a. Do not plug any other appliances into the outlet with your Home Delux infrared sauna.
- b. Install the sauna on a completely level floor.
- c. Do not spray the exterior with water. If the floor is damp, install a floor separator to keep the sauna high & dry.
- d. Do not store flammable objects or chemical substances near the sauna.

Installation procedure

Sauna Room:

1. Structure of Infrared Sauna. See **FIG-1**

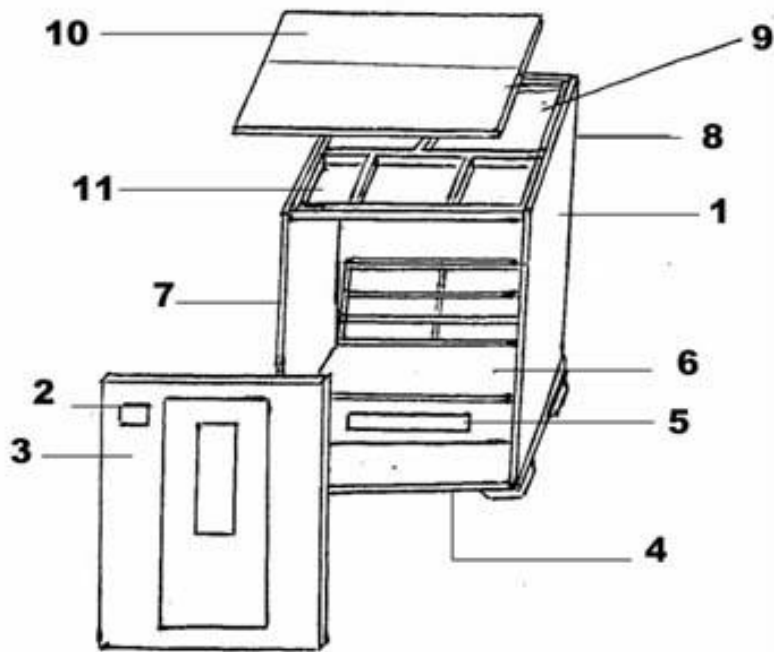

- | | | |
|-------------------------------|-----------------------------------|------------------------------|
| 1. right side board | 2. digital panel | 3. front board |
| 4. bottom board | 5. sitting baffle | 6. sitting board |
| 7. left side board | 8. back board | 9. internal top board |
| 10. external top board | 11. electric control panel | |

1. One unit is packed into three cartons. See FIG-2



FIG-2 Three cartons

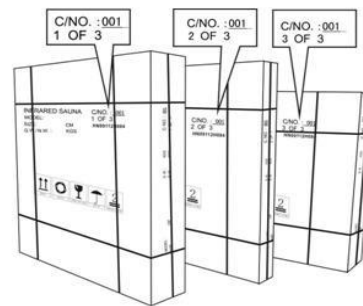


FIG-2.1 C/No. for three cartons

Check the C/NO. on both cartons if they are the same. If not, please notify the store/website you purchased yourHome Delux Infrared Sauna. For example, C/NO: 002 1 OF 3 and C/NO: 002 2 OF 3 and C/NO: 002 3 OF 3 are for one unit. See **FIG-2.1**

Make sure all parts are present before installing the unit. See packing list below.

- | | | | | |
|-----------------------|------------------|---------------|--------------------|-----------------------|
| A. User manual | B. Bottom board | C. Back Board | D. Left side board | E. Right side board |
| F. Sitting baffle | G. Sitting board | H. Back rest | I. Front board | J. Internal top board |
| K. External top board | L. Screws | | | |

4. Installation procedure.

5. Place the bottom board (section 4, Sauna room diagram, p.3) in the desired location of your sauna, and make sure which side is

- 6.
- 7.
8. the front and which side is the back. **See FIG-3.** Align the backboard (section 8) with bottom board's corresponding battens; make sure they are in line. **See FIG-4**



FIG-3 Placing bottom floor



Back board



FIG-4



FIG(4-1) Plug the wire of bench heater

FIG-4 Assembling back board **and plug** the wire under the bench

Note: Make sure that the wires are tightly connected, otherwise the heater will not work. ,

9. Put the left panel on the bottom panel and Use the buckle Fasten the left boards with back panel corresponding battens; make sure left boards fits flush into back board and latch together **See FIG-6,7**



FIG-5 Buckle



FIG-6 *Left board*



FIG-7 Assembling Left board

- 7.Align the **Right** boards with bottom board's corresponding battens; make sure Right boards fits flush into back board and latch together **See FIG-8,9,10**



FIG-8 Buckle



FIG-9 *Right board*



FIG-10 Finished the right board

FIG-9,10 Assembling Right board

10. Locate bench Support and slide it down vertically into the slot within the inside wall. **See Figure 12,13** Next, locate sitting Bench and slide into place. **See Figure 14,15** **Note:** Put the sitting board (section 15) horizontally on corresponding battens of the backboard. **See FIG-15**



Bench support

FIG-12

FIG-13

Sitting bench

FIG-14

FIG-15

FIG-13 and 15 Assembling bench support and sitting bench

9. Align the front glass panel with bottom board's corresponding battens, and then latch it with the left and right boards respectively. Notes: Take caution of the glasses to avoid damage. See FIG-16 and FIG-17



Latching



FIG-16 put the front panel on the grooves of the bottom panel to fix it

FIG-17 finished the front glass panel

10.. Assemble the Top panel .Raise the top panel enough to see if it fits with the surrounding boards, then put down. See FIG-18and FIG-19,20



FIG-18 Top Panel



FIG-19 Setting the top panel



FIG-20Screws fixed

Note:FIG-16 Use the 3x35mm Screws to fix the top panel with the left ,right ,front and back panel to let your sauna assemble more tightly

11. Connect the Plug Cables and Control panel wires and temperature sensor wires and Antenna wires on the top panel See FIG-21-26



12.INSTALL THE Door handle

1. Align the Outside Doorknob against 2 holes on the outside of the door, hold it at an angle against the door, the **short wood** handle inside the sauna room and the **longer** handle at the outside . See FIG-28 (**Short handle inside and longer outside**)

2. Insert the Screw into the hole located on the inside of the door. Screw until it is tightly fit. See FIG-30



FIG-27 door handle



FIG-28



FIG-29 screws fixed



FIG-30 door handle finished

FIG (28.29.30) - Install the door handle

13.INSTALL THE Inside accessories parts (Oxygen ionizer ,cup holders ,towel rack ,Magazine racks)

- 1) Assemble the oxygen ionizer---the position must be make sure that the wire is enough to connecting from the left panel to the top Panel (if your sauna without OXGYEN ,then please ignore this step)



FIG-31 Oxygen ionizer



FIG-32 assemble the Oxygen ionizer

- 2) Assemble the cup holders ,towel rack ,Magazine racks –The position you can install at the anywhere which you prefer (Normally we suggestion : Towel rack is upon the cup holders at the right or left side and the magazine racks is at the front bottom at the right side) FIG-33,34,35



FIG-33 Towel rack



FIG-34 Cup holder



FIG-35 Magazine rack

14. Install the External roof panel


Noted: Must be Making sure all steps are finished correctly, plug in the power and try using the sauna at first to make sure it will work properly. Then put the external roof panel (FIG-36) over the internal top panel , and put out the power plug through the corresponding hole in the external top Panel . See FIG-37 Finally fixed the external roof panel covered well .




External roof panel FIG-36

FIG-37 Slip the power plug through external top panel and use screws to fix it

15. Control panel and Electrical diagram

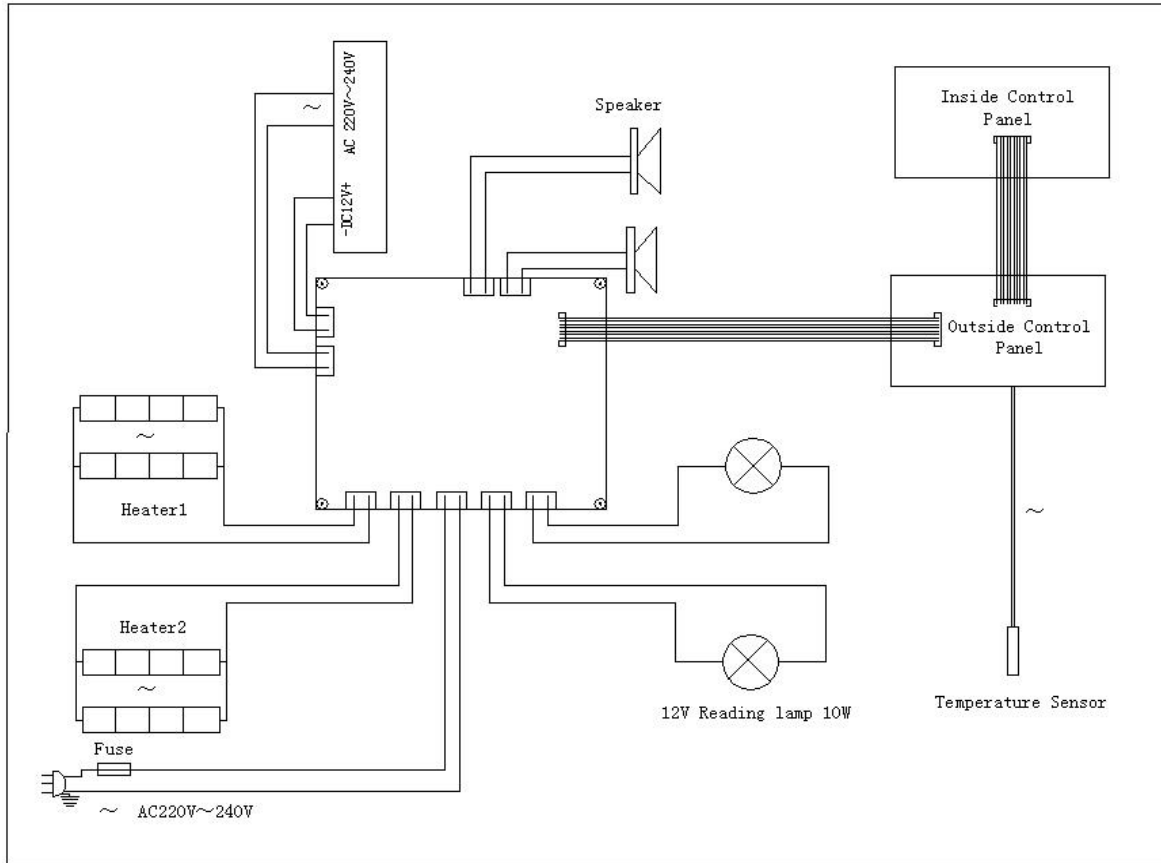


2021 Controller

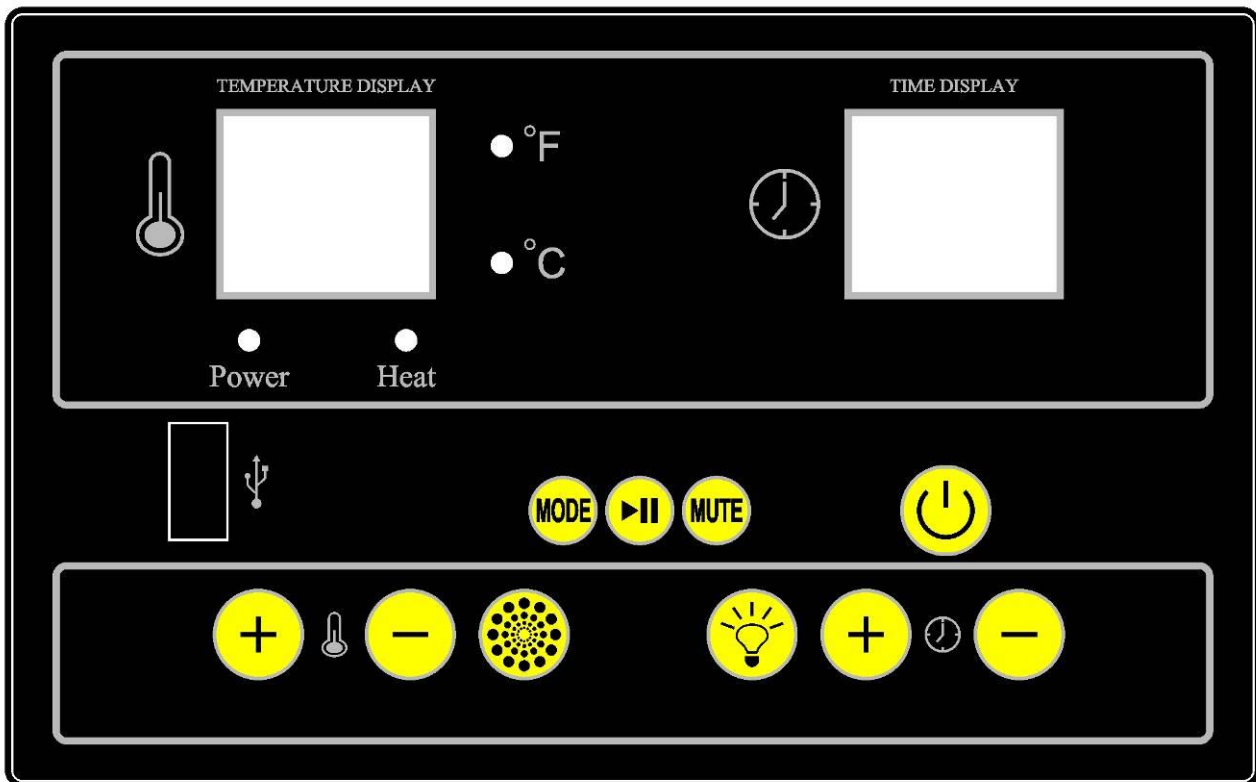


Technical parameters

- Spannung: AC90-265V/AC 50Hz/60Hz
- Maximaler Heizstrom: 20A
- 12V Ausgangsleistung: 6A
- Zeit: 1-99 Minuten
- Temperaturregelbereich: 30°C-65°C (Fahrenheit 86°C-150°C)


Funktionen des Bedienfelds:

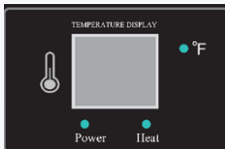

Diese Taste befindet sich oben links: Anzeige der Temperatur

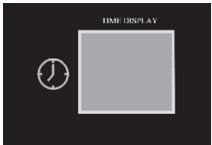

Diese Taste befindet sich oben rechts: Anzeige der Temperatur

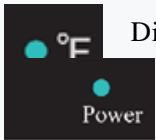

Diese Taste zeigt an, dass die angezeigte Temperatur Fahrenheit ist

Diese Taste zeigt an, dass der Stecker bereits mit dem Strom verbunden ist



Diese Taste zeigt an, ob die Heizung heizt oder ausgeschaltet ist. leuchten ist heizen, aus geht nicht

Funktionstasten:



" On/Off" : einmal drücken ist an, erneut ist aus.



Farbtherapie: Es gibt 7 Arten von verschiedenen Farben, die sich ändern können. Drücken Sie den Farbtherapieknopf, es ist eine automatische Zirkulation von 7 verschiedenen Farben;



die Geschwindigkeit des Lichtwechsels ist langsam; erneut drücken, L2 anzeigen drücken die Lichtänderungsfarbe ist schneller, L3-Kunden können die Farbe angeben, die Taste 2 Sekunden lang drücken und dann die verschiedenen Farben auswählen.

 


Innenlicht & Außenlicht: Drücken Sie eins, Innenlicht ist an und Außenlicht aus; Drücken Sie wieder Innenlicht aus und Außenlicht an. drittes Mal drücken ist innen und außen beides an, viertes Mal drücken: innen und außen beides aus.



Zeittasten "+" und "-": Stellen Sie die Zeit mehr oder weniger ein

Und es kann auch die Lautstärke "+" oder "--" einstellen, wenn der "Modus" aufgerufen wird (MP3 & Radio). Die normale Situation besteht darin, die Heizzeit der Saunakabine anzupassen.



Temperaturtasten "+" und "-": Stellen Sie die Temperatur höher oder niedriger ein;

Halten Sie die Temperaturtasten "+" und "-" gleichzeitig gedrückt, um Fahrenheit und Celsius umzurechnen.

Musik System :

Drücken Sie "MODE", um die FM BLUE USB-Funktionsauswahl aufzurufen. Bluetooth-Gerätename: BT301.

"" : im FM-Zustand: 5 Sekunden lang gedrückt halten, automatisch die Radiofrequenz suchen und speichern. Wenn die Suche beendet ist, drücken Sie einmal, um die nächste Frequenz auszuwählen.

BLAU (Bluetooth) und USB: Einmal drücken, um den nächsten Song auszuwählen.

"MUTE" : Im FM-Zustand: Einmal drücken, um MUTE zu aktivieren.

Im BLAU-(Bluetooth)- und USB-Modus: Einmal drücken, um die Wiedergabe zu unterbrechen

Pannenbeseitigung:

- 1) Der Temperatursensor ist defekt und die digitale Temperaturröhre zeigt „EE“ an.
- 2) Hochtemperaturschutz: Temperatur $\geq 75^{\circ}\text{C}$, digitale Röhrenanzeige der Temperatur "H".

