

Shower Room Installation Instrucion

9018

1500*1500*2250mm



Cautions in Installation and Using





Thanks for selecting our shower room series. To guarantee safe and normal operation as well as prolong service lifetime. Pls read Instruction carefully before installation.

Note: Constar is dedicated to improving products quality, find something new in what is old, we would if there is difference in the Instruction until further notice. Any discomfort, we ask your pardon.







Directory

| | |
|---|------|
| 1: Tool contents..... | 3 |
| 2: Partial accessory list | 4- 6 |
| 3: Pipe and drain installation drawing..... | 7 |
| 4: Installation Procedure | 8-19 |
| 5: Notes..... | 20 |
| 6: Delivery and storage notice | 20 |
| 7: Trouble shootings | 21 |

1. self-provide tool
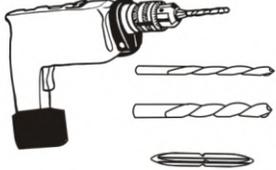
| Name | Tool |
|---------------------|--|
| Track level bar |  |
| Tape measure |  |
| Ajustable spanner |  |
| Rubber hammer |  |
| Phillips srewdriver |  |
| Scissors |  |
| Glass cement |  |
| electric drill |  |
| 3mm aiguille | |
| 6mm aiguille | |
| tap drill | |

2. Partial accessory list
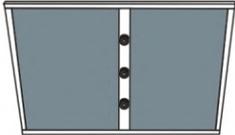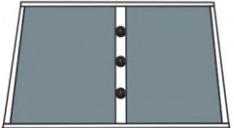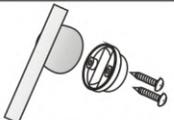
| Item | Name | Accessory | Quantity |
|------|---------------------------------|---|----------|
| 1 | (1) Tub |  | 1 |
| 2 | (2. 1) Left Backboard |  | 1 |
| | (2. 2) Middle backboard |  | 1 |
| | (2. 3) Right backboard |  | 1 |
| 3 | (3) Roof |  | 1 |
| 4 | (4. 1) Upper rail |  | 1 |
| | (4. 2) Bottom rail |  | 1 |
| | (4. 3) Side upright column |  | 2 |
| | (4. 4) Middle upright column |  | 2 |
| 5 | (5. 1) Arch fixed door glass |  | 2 |
| | (5. 2) Arch flexible door glass |  | 2 |
| | (5. 3) Knob |  | 2 |
| 6 | (6) Glass positioning fixture |  | 8 |

(4)

7. Trouble shootings

| Troble | Cause | Remedy |
|--------------------|---|---------------------------------------|
| No power | 1. Electric power don't connect well, leak swtich is cut off. | Access to power |
| | 2. Fuse wire is broken, switch of control panel is failure. | Maintain or replace |
| | 3. GFCI is out of work | Check GFCI |
| No head shower | 1. water pressure is abnormal | Check water pressure |
| | 2. Cold and hot water switch is closed. | Turn on the cold and hot water switch |
| | 3. chocking nozzle | Clean |
| Water pipe leakage | 1. Seal ring damaged | Replace seal ring |
| | 2. Tie in don't connect well | Connect it again |
| No radio | 1. Connecting wire is cut | Make connection |
| | 2. Loudspeaker is broken | Replace a new one |
| Phone unuable | 1. Telephone wire don't connect well | To make contact telephone line |
| | 2. Control panel is broken | Maintain or replace |
| No light | 1. Bulb is broken, ballast is broken | Replace |
| | 2. Break of ballast | To make contact |
| | 3. Control panel is broken | Maintain or replace |
| No exhaust | 1. Fan is broken | Replace |
| | 2. Tie-in is not connect well | To make contact |
| | 3. Control panel is broken | Maintain or replace |

If complete shower room cant work normally, please check it as compare above then obstacle avoidance.
If customers cant make sure the cause of obstacle or lack of ability mantianance. Please contact distributor.

(21)






5. Notes

1. It is unadvisable to take a shower after drunk.
2. It is unadvisable to have a shower immediately after acute sports.
3. Please avoid bath or shower in morning.
4. Keep the temperature of dressing room near to the bathroomS
5. If you feel uncomfortable while having a shower , you should go out of the shower room as soon as possible.
6. The time of shower is advisable to be between 15 minutes and 20 minutes, no longer .
7. Drink water to supplement moisture after shower or bathing.
8. People who suffer from heart disease, high blood pressure, diabetes or who feel unwell or pregnant woman are unadvisable to have bathing ,massage or shower.


6. Delivery and storage notice

- 1, It is prohibited to store organic solvent together, such as formic acid and methanol.
2. Handle with care if it need transport. Heavy stress, mechanical impact and sharp pounding is prohibited.
3. It should keep it dry and airy and make sure there is no etchant gas.

2. Partial accessory list


| Item | Name | Accessory | Quantity |
|------|-------------------------|---|----------|
| 7 | (7) eccentric wheel |  | 8 |
| 8 | (8) foot massage device |  | 1 |
| 9 | (9. 1) Handshower |  | 1 |
| | (9. 2) hand shower tube |  | 1 |
| 10 | (10) Lifting rod |  | 1 |
| 11 | (11) Big Handle |  | 1 |
| 12 | (12. 1) Magnetic strip |  | 2 |
| | (12. 2) Waterproof belt |  | 2 |
| | (12. 3) U style thong |  | 4 |
| 13 | (13) Top shower |  | 1 |
| 14 | (14. 1) St4x60mm Screw |  | 8 |
| | (14. 2) St4x16mm Screw |  | 10 |
| | (14. 3) St4x10mm Screw |  | 22 |

2. Partial accessory list


| Item | Name | Accessory | Quantity |
|------|--------------------------|---|----------|
| 15 | (14) Shelf |  | 1 |
| 16 | (15) Hot&cold water pipe |  | 2 |
| 17 | (16) Soap holder |  | 1 |

(6)

4. Installation Procedure

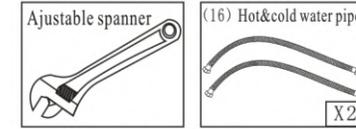


Connect fan, speaker, and other electronics as labels.
Connect (16) Hot&cold water pipes and use adjustable spanner to make it tight. Then make power on.

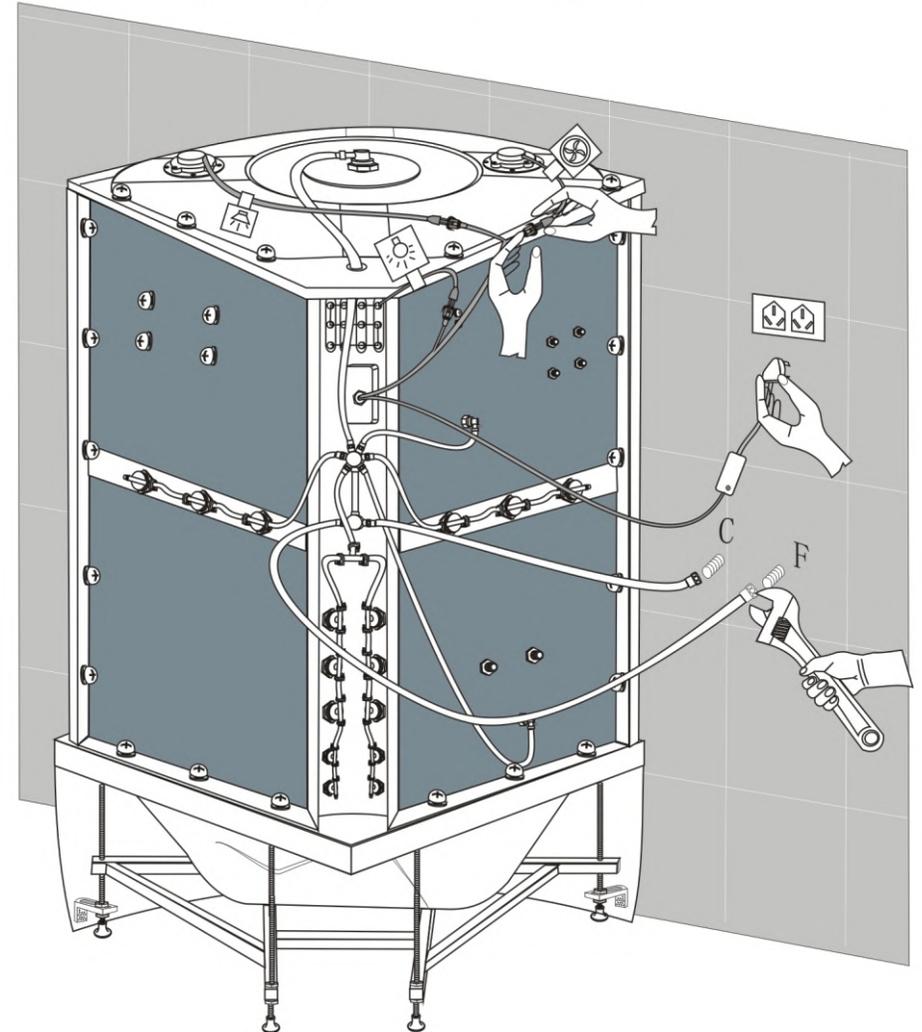


(19)

4. Installation Procedure

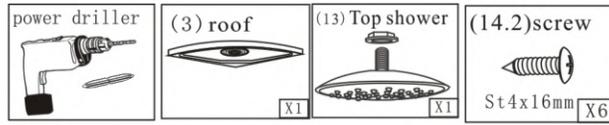


Put roof onto the glass room, and Drill hole by power driller with diameter 3mm drill head. Then fix the connection by screw ST4*16mm.

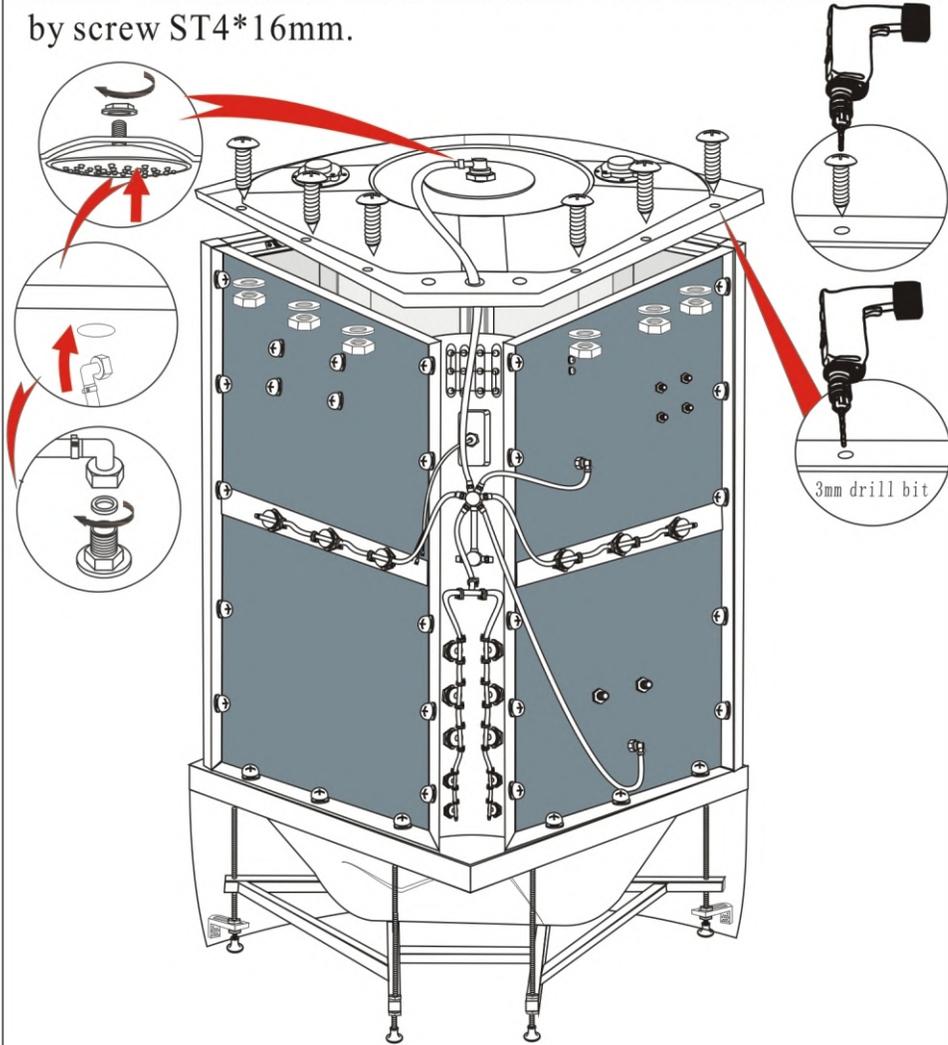

(18)


3. Pipe and drain installation drawing

C=Cold water inlet
H=Hot water inlet
D=Drain

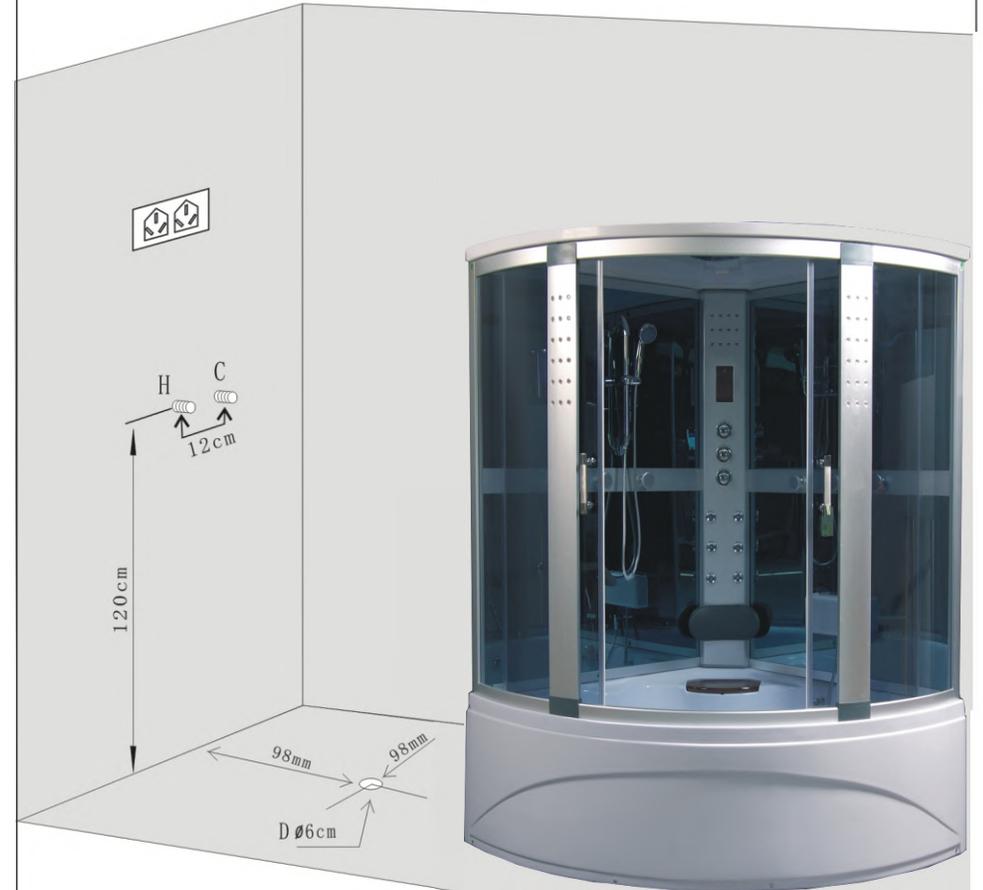


(7)

4. Installation Procedure

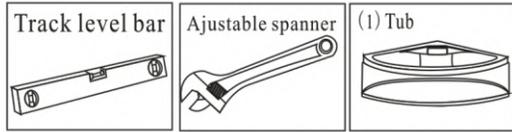


Lace the base on a solid floor and adjust the feet so that it is level. Check carefully using a spirit level. Remove film before installation.

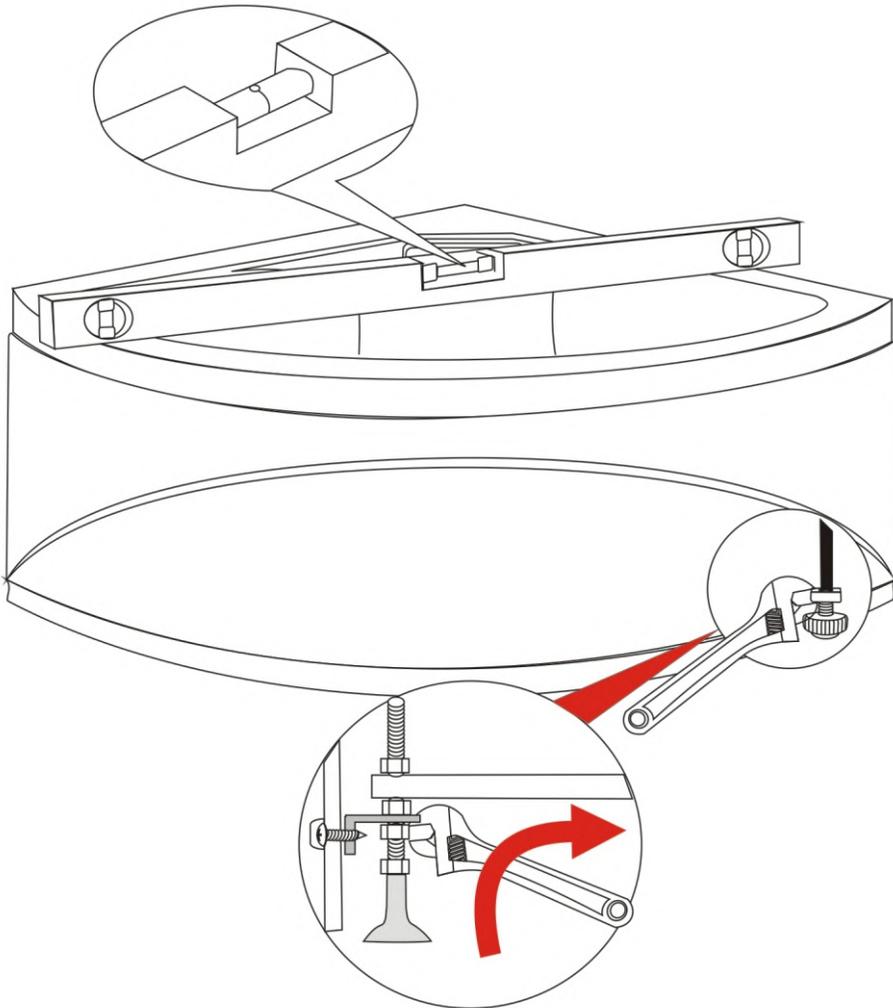


(8)

4. Installation Procedure

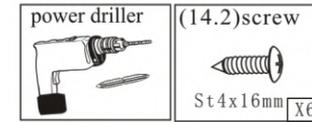


Lace the finished glass room onto tub, adjust its position to fit it with tub. Drill hole by power driller with diameter 3mm drill head. Then fix the connection by screw ST4*16mm.

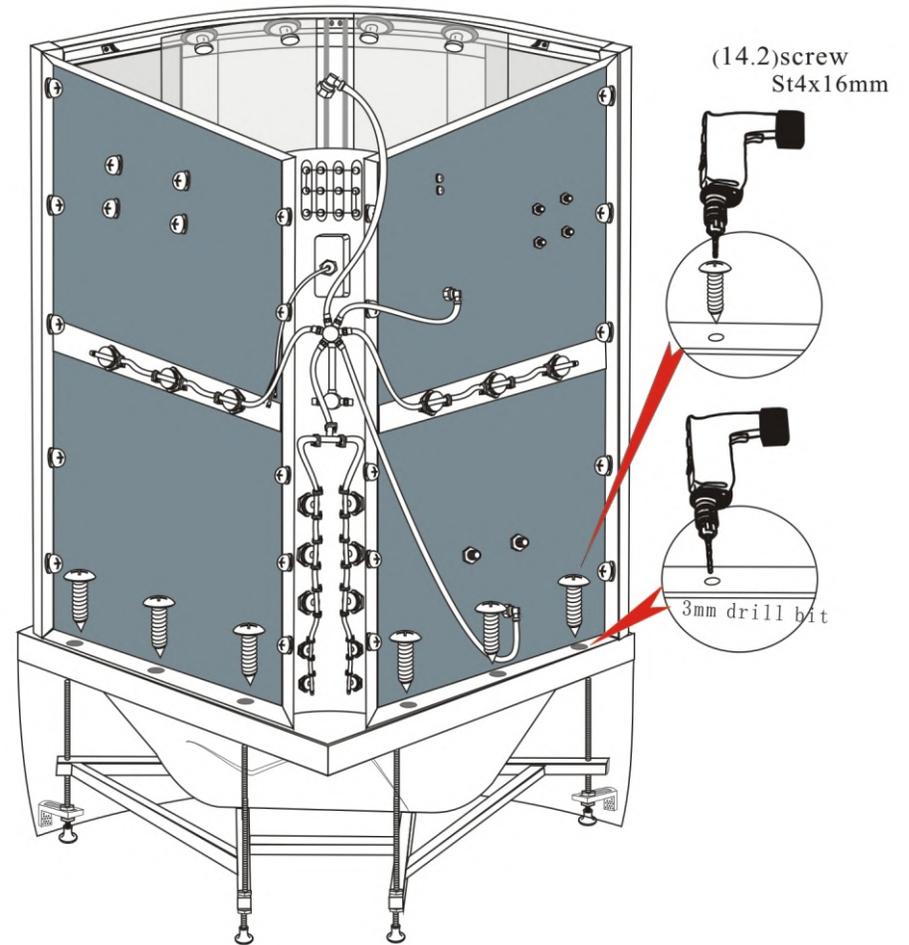


(17)

4. Installation Procedure




Gather glass room and back board, and make them the same level, and then fix them by (14.2)screw ST1*16mm. Connect the water pipes as the label.

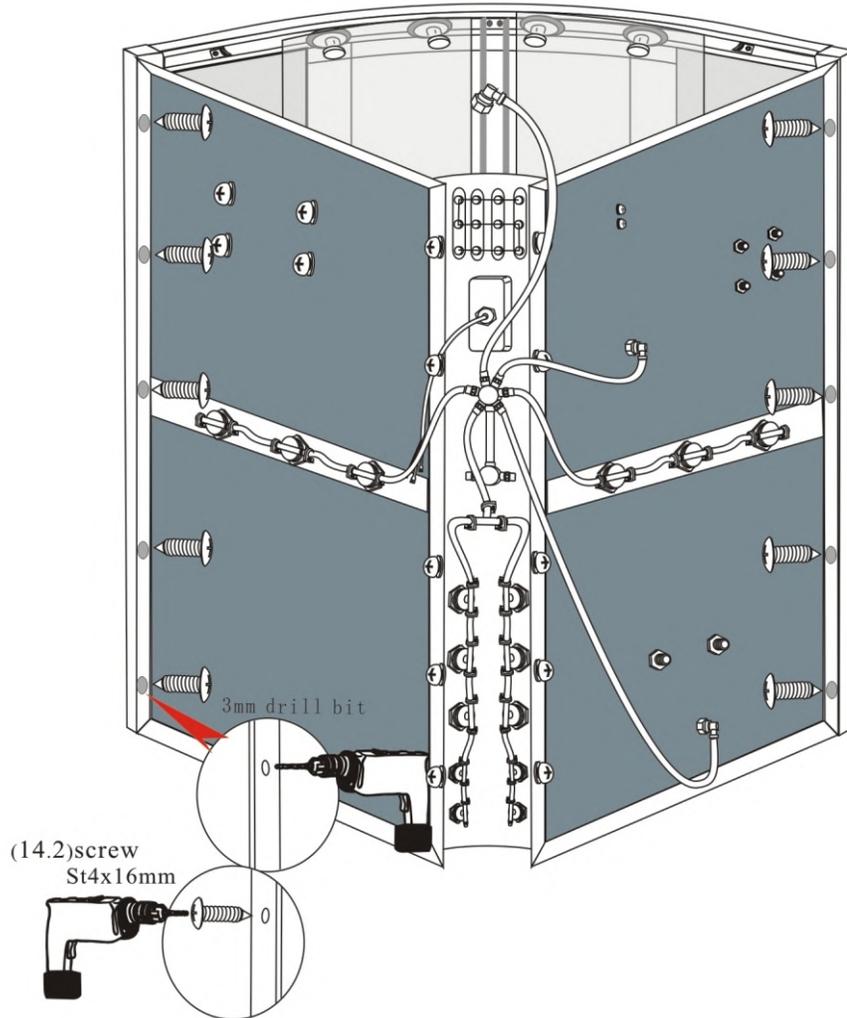


(16)

4. Installation Procedure

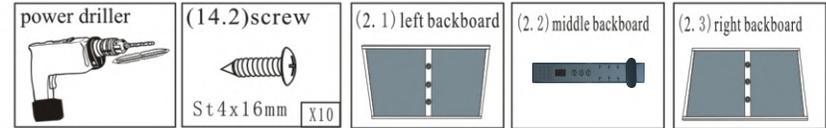


Lace these 3 backboard upright, and make them suitable. Connect them by screw ST4*16mm.

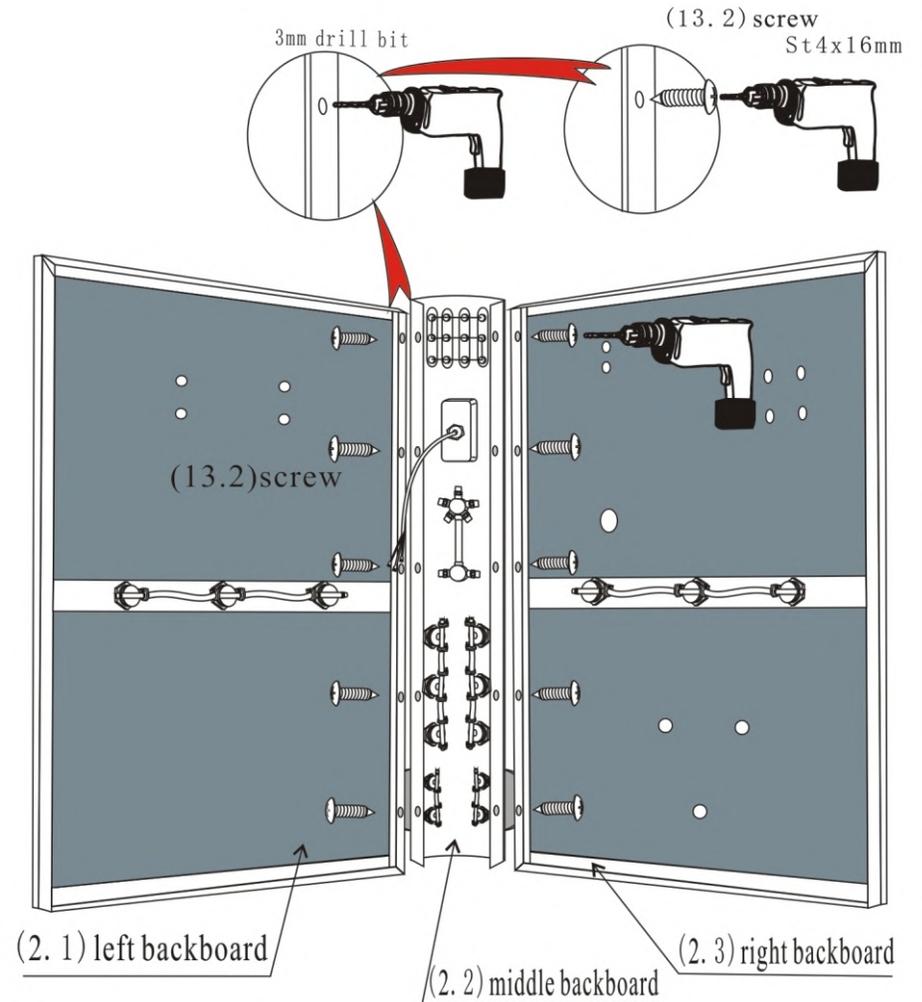


(9)

4. Installation Procedure




Fit these 3 items as picture.

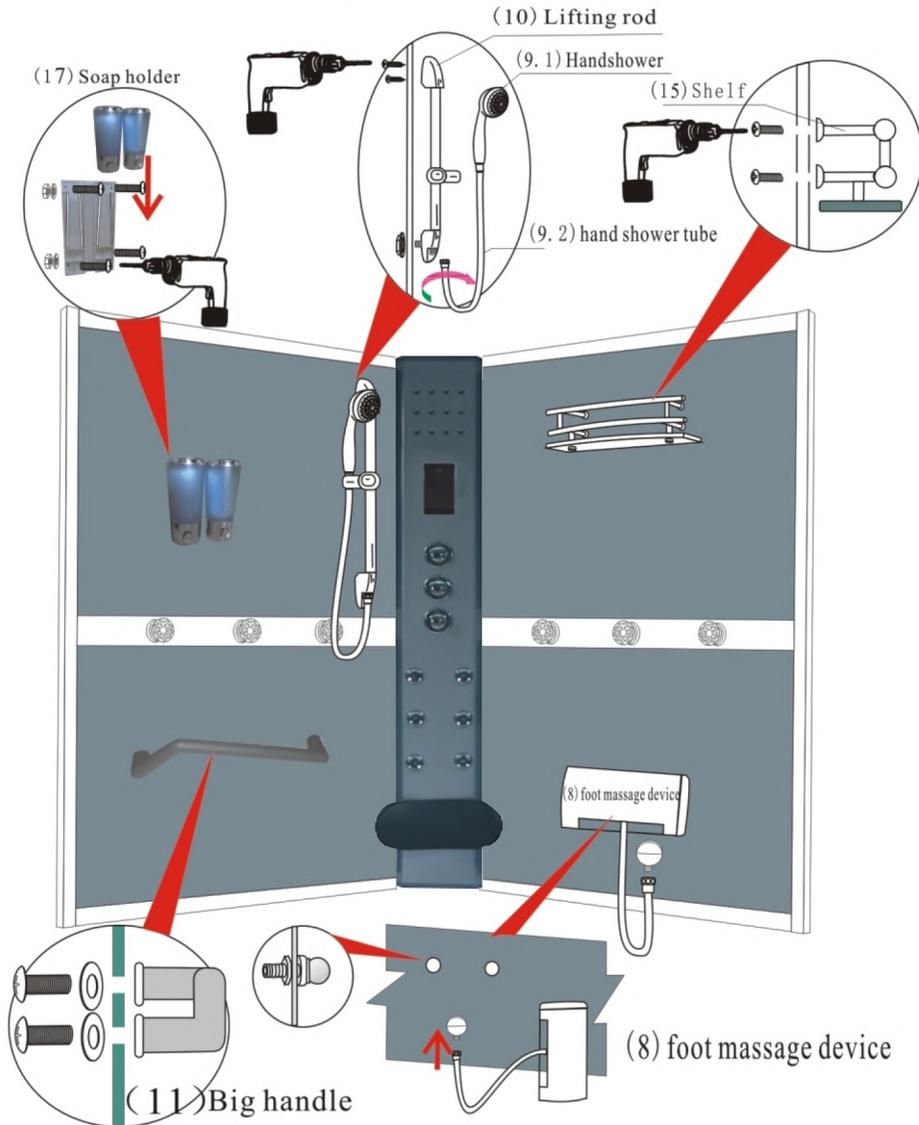


(10)

4. Installation Procedure

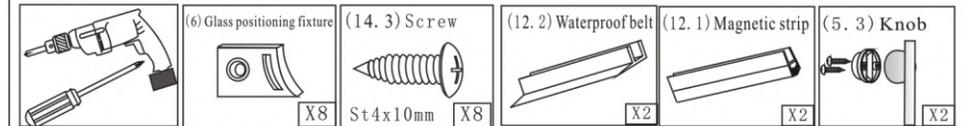


Fit the knob(5.3), and fix it by its own screws. Fix the glass positioning fixture(6) by screw ST4*10mm. Set the magnetic strip(12.1) and waterproof belt on the door.

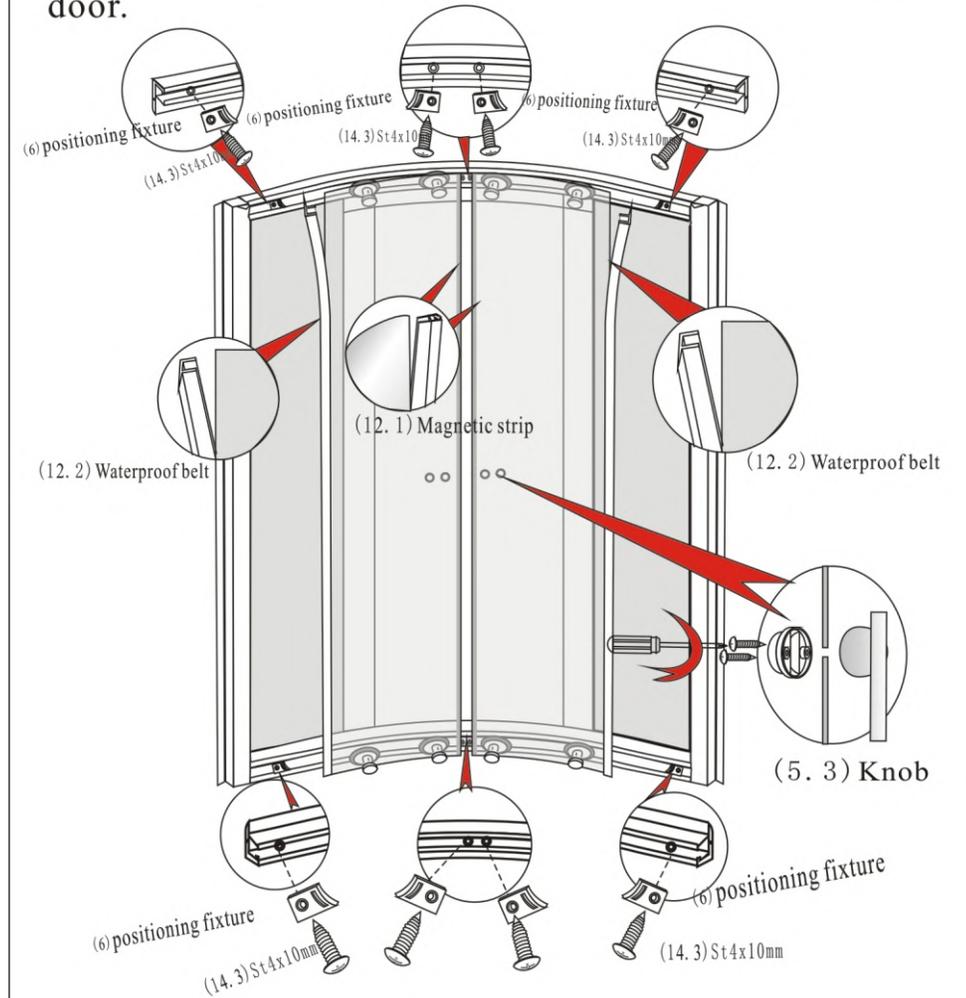


(15)

4. Installation Procedure

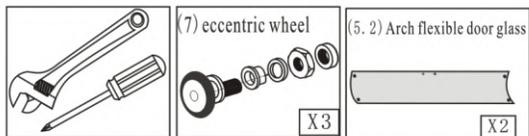


Set eccentric wheel(7)into arch flexible door glass topmost holes.Fix the wheel and hang the door up into rails, and fit the wheel into bottom holes then,and adjust the wheel by spanner,to make the door go and back smoothly.

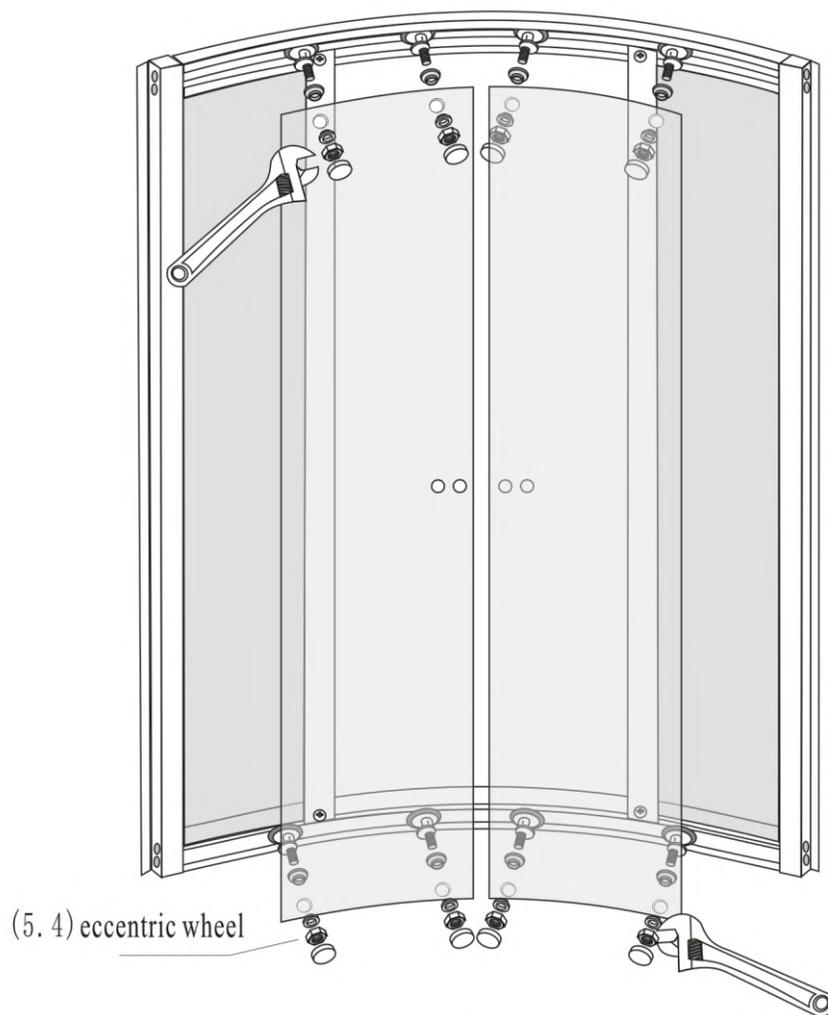


(14)

4. Installation Procedure

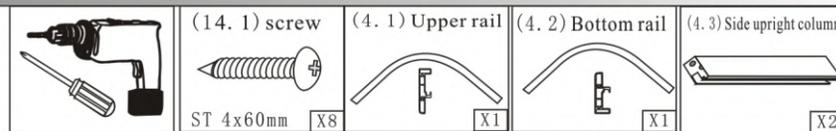

Identify 4.1 and 4.2. Connect them with side upright column. Then

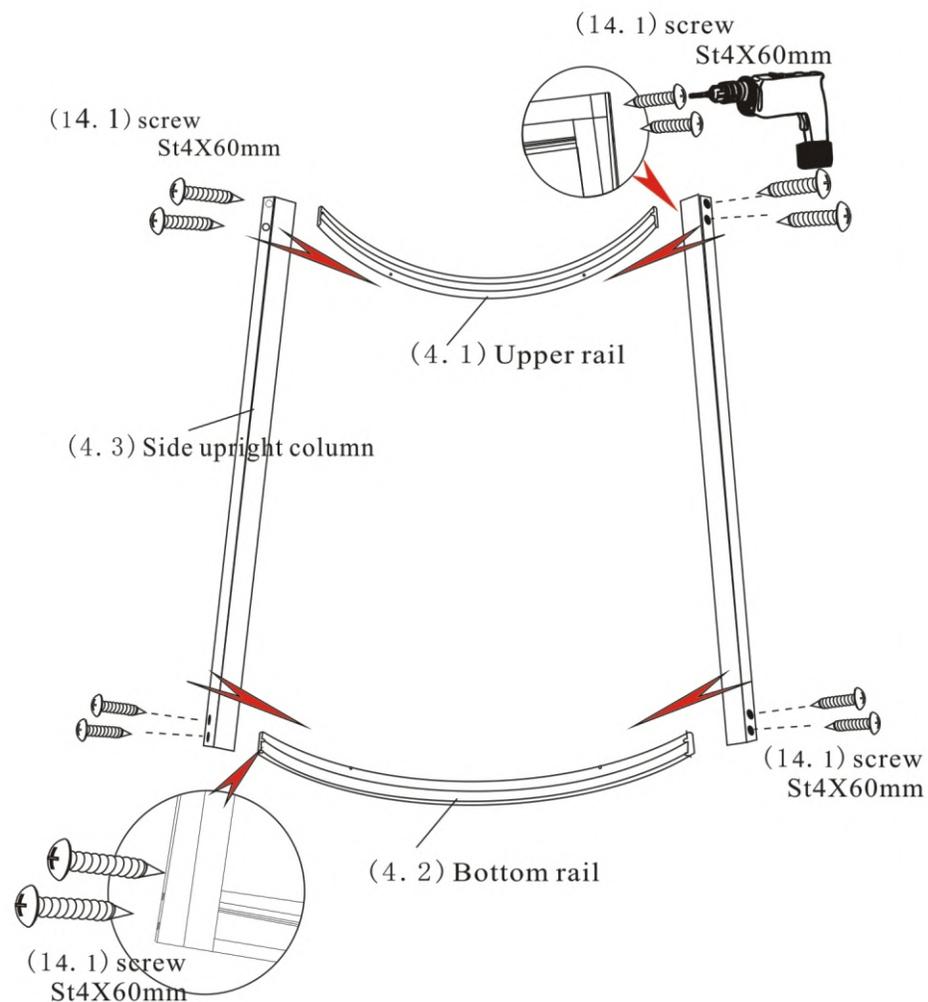


(11)

4. Installation Procedure




Set (12.3)U style thong into glass(5.1)as picture.Put the arch fixed glass on the rails,and use rubber hammer to hit the glass into the curve of side upright column.

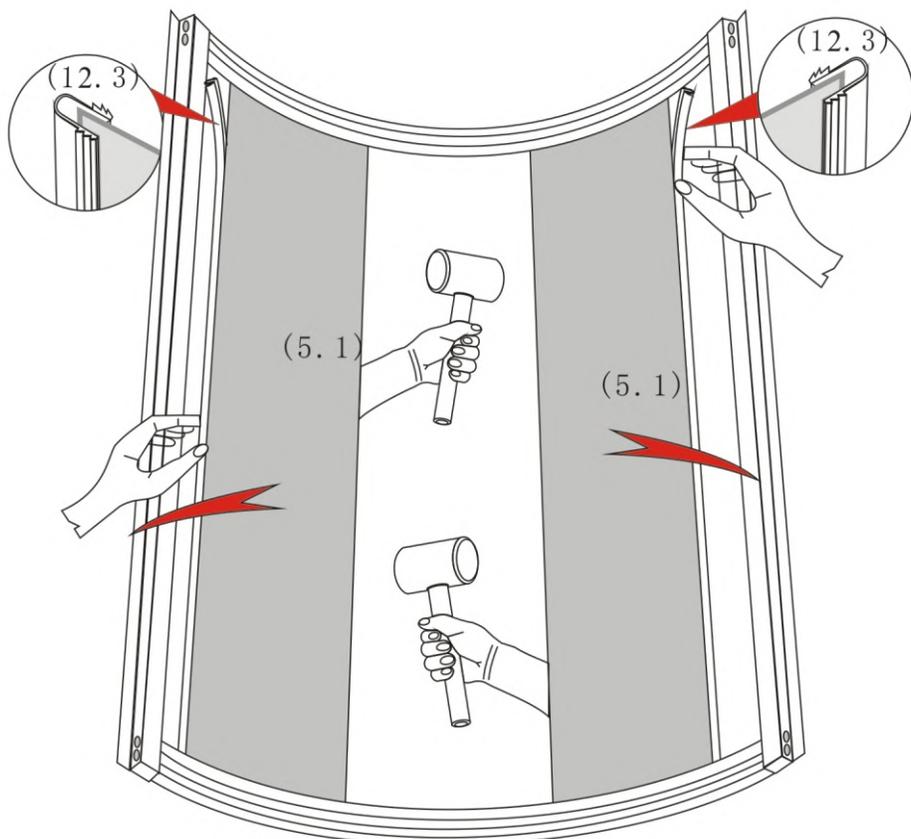


(12)

4. Installation Procedure

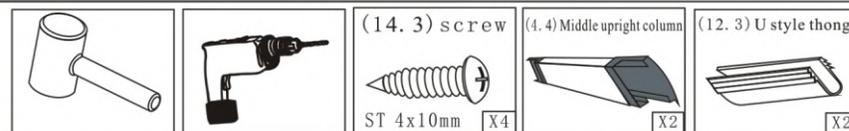

Set the middle upright column(4.4)to connect with fixed glass other sides.Fix middle upright column by screw ST4*10mm(14.3).

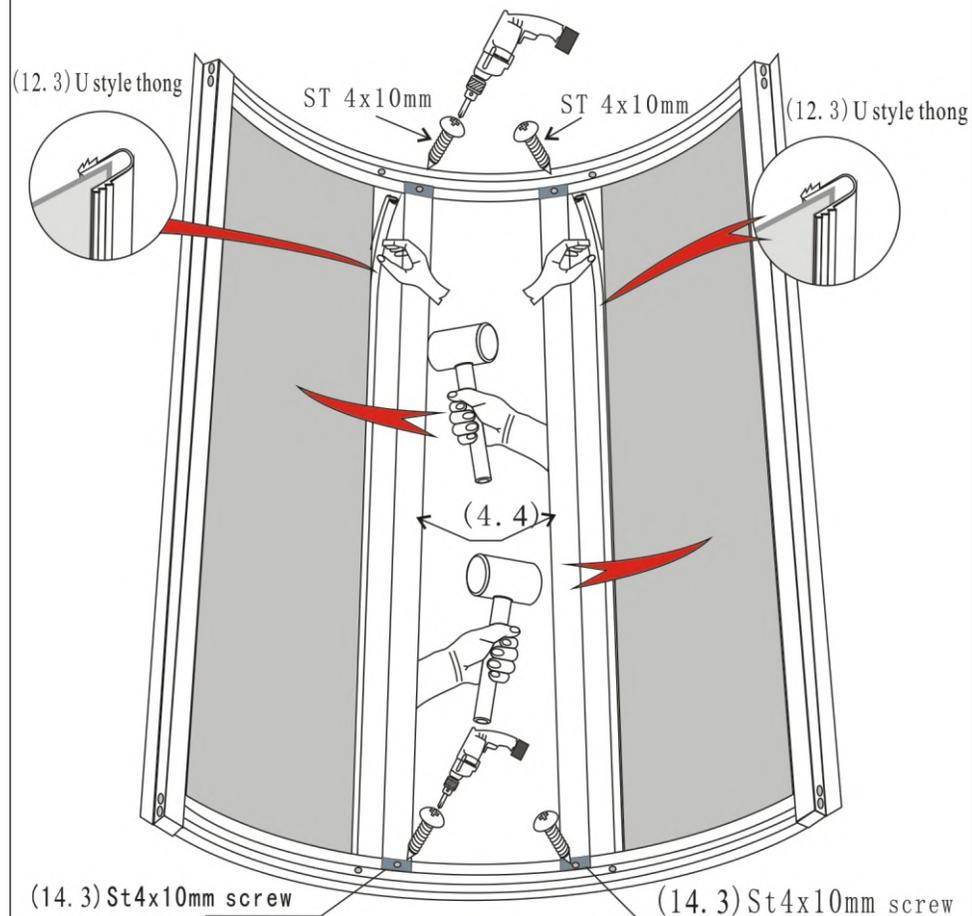

(13)